



TECHNICAL DATA SUPERCOOL AIR VEST

PART # 6400 “Super Cool Air Vest”

PLEASE READ AND UNDERSTAND BEFORE USING

- 1. IMPORTANT: Replacement Air Vest Part #6401 Must Always be used with regulator kit part #6402**
- 2. NEVER exceed 200 PSI inlet pressure to regulator**
- 3. Maximum working pressure to vest = 70 PSI with vest running**
- 4. IMPORTANT: Air vest MUST be worn over clothing, (EI: T-shirt) Never wear over bare skin.**
- 5. Never put on or take off vest with air running**
- 6. The air vest is not a life support device or breathing air system. Its sole purpose is for added comfort when working in hot conditions.**
- 7. When storing vest caution should be used NOT to kink or crush internal tubing.**
- 8. To clean: rinse in warm water with mild detergent or hose off with garden hose, Hang to dry. Connect vest at low air pressure (10 lbs or less) to clear any water from lines BEFORE wearing vest.**
- 9. When wearing the air vest under coveralls a hole must be made in the back of the coveralls to allow the air fitting on the back of the air vest to protrude.**

TO LOCATE THE POSITION OF THE HOLE

- 1. Put on the air vest and the coveralls and adjust to a comfortable position.**
- 2. Mark the spot on the coveralls where the air fitting on the vest hits the coveralls.**
- 3. REMOVE the coveralls and cut a hole just big enough to let the air fitting protrude.**

NOTICE BEFORE USING

USER SHALL DETERMINE THE SUITABILITY OF THIS PRODUCT FOR HIS INTENDED USE AND USER ASSUMES ALL RISK AND LIABILITY WHATSOEVER IN CONNECTION THEREWITH.