



## **ASSEMBLY INSTRUCCIONS #6401 REGULATOR**

- **Install air hose to front of brass “T” fitting (air gauge side) on regulator.**
- **Install supplied quick disconnect to coupler to end of PVC (clear) hose that is attached to regulator.**
- **Install desired air coupler fittings (not included) to back of brass “T” and air line.**
- **Install pressure gauge on regulator. Caution should be used not to screw fitting too far into body of regulator as it may close internal port. Normally finger tight plus one turn will seal.**
- **After regulator is installed, back off pressure adjusting knob before air is turned on. Turn on air supply and regulate adjusting knob until the gauge shows desired pressure. To prevent tampering and maintain desired pressure setting, tighten locking screw on top of the adjusting knob.**
- **Lubricators should be down stream of regulator**
- **Filters should be installed upstream of regulator**

**Shoot Suit, Inc warranties this product to be free from defects in material and workmanship for a period of 90 days from date of purchase. Should this product fail due to material or workmanship Shoot Suit, Inc sole obligation at their discretion shall be to repair or replace the product without charge if returned freight prepaid to the factory along with a dated proof of purchase. This warranty does not cover damage to the product due to neglect, misuse, abuse or accident, nor does it cover any loss, damage or expense either direct or indirect or consequential, arising from the non-function or failure of this product. This is a limited warranty notice replaces any other warranty information either written, implied, verbal or appearing in any literature referring to this product.**