


Item No. 5800


- Repairs most door dings without body filler
- From dent to primer in as little as 3-4 minutes
- Exact control of pulling force needed
- Works with all stud welders using 2.0, 2.2, or 2.6 diameter draw pins
- Can pay for itself in one use

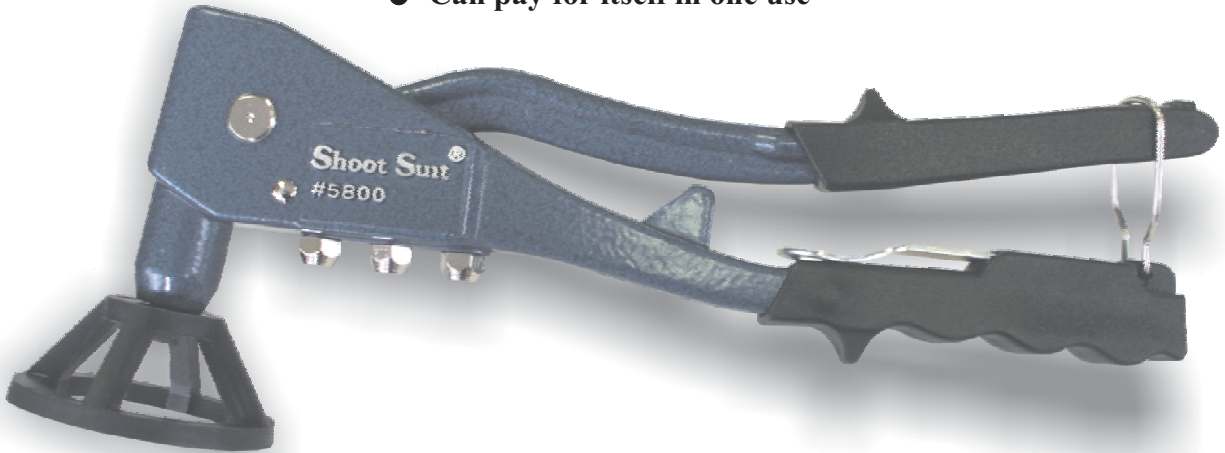

USE INSTRUCTIONS


DO NOT USE SILVER TIPS WITH CONE

1. Remove **BLACK TIP** from gun tip. Insert black tip through cone. **CLOSE** handles on gun and thread cone assembly into gun tip. **HAND TIGHTEN ONLY.**
2. Weld draw pin into the lowest point of dent with a minimum amount of weld time.
HINT: Just a tap of the trigger on the welder is best.

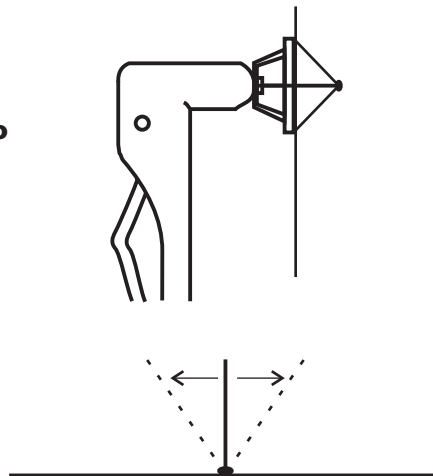

3. Slide Ding-Near-Perfect over draw pin, hold tight against surface. Squeeze handles **gently** to pull the dent out. **Caution:** This tool creates extreme pulling force. You may want to practice on a scrap piece of metal the first time you use it.
4. Remove draw pin by gently bending it back and forth.
5. Finish with 80 grit grinder or fine body file. if imperfection still exists repeat steps 1-3.

**Shoot
Suit**[®]
For Professional Performance

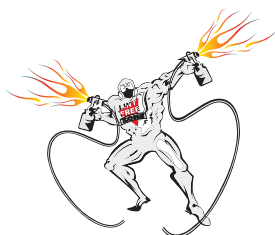

1721 SE Grace Ave. Unit D
Battle Ground, WA.
PH: (800) 422-1604
FAX: (360) 687-3452
EMAIL sales@shootsuit.com